


Abru Arrow Handrail Fitting Instructions

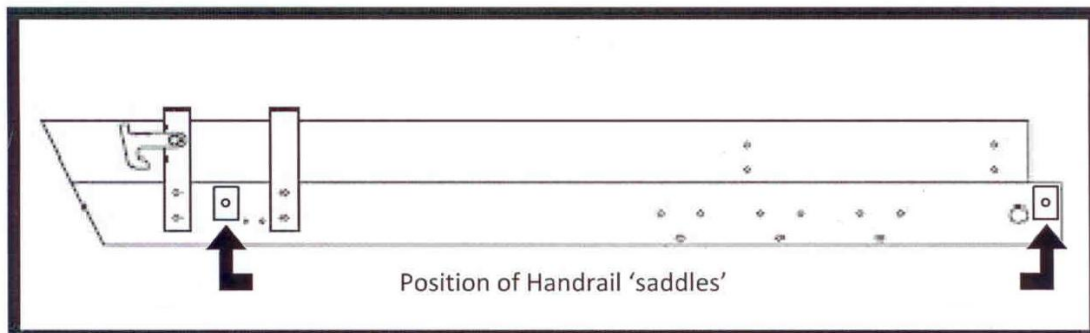

1. Position 1st top 'saddle' at the very top of ladder (*see drawing*). Mark through centre hole and drill using 5mm bit. Secure top of handrail using nut bolt and washer supplied.
2. Position 2nd 'saddle' at bottom (*see drawing*) using handrail as guide. Mark through centre hole and drill using 5mm bit. Secure bottom of handrail using nut bolt and washer supplied.