









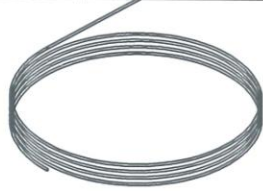


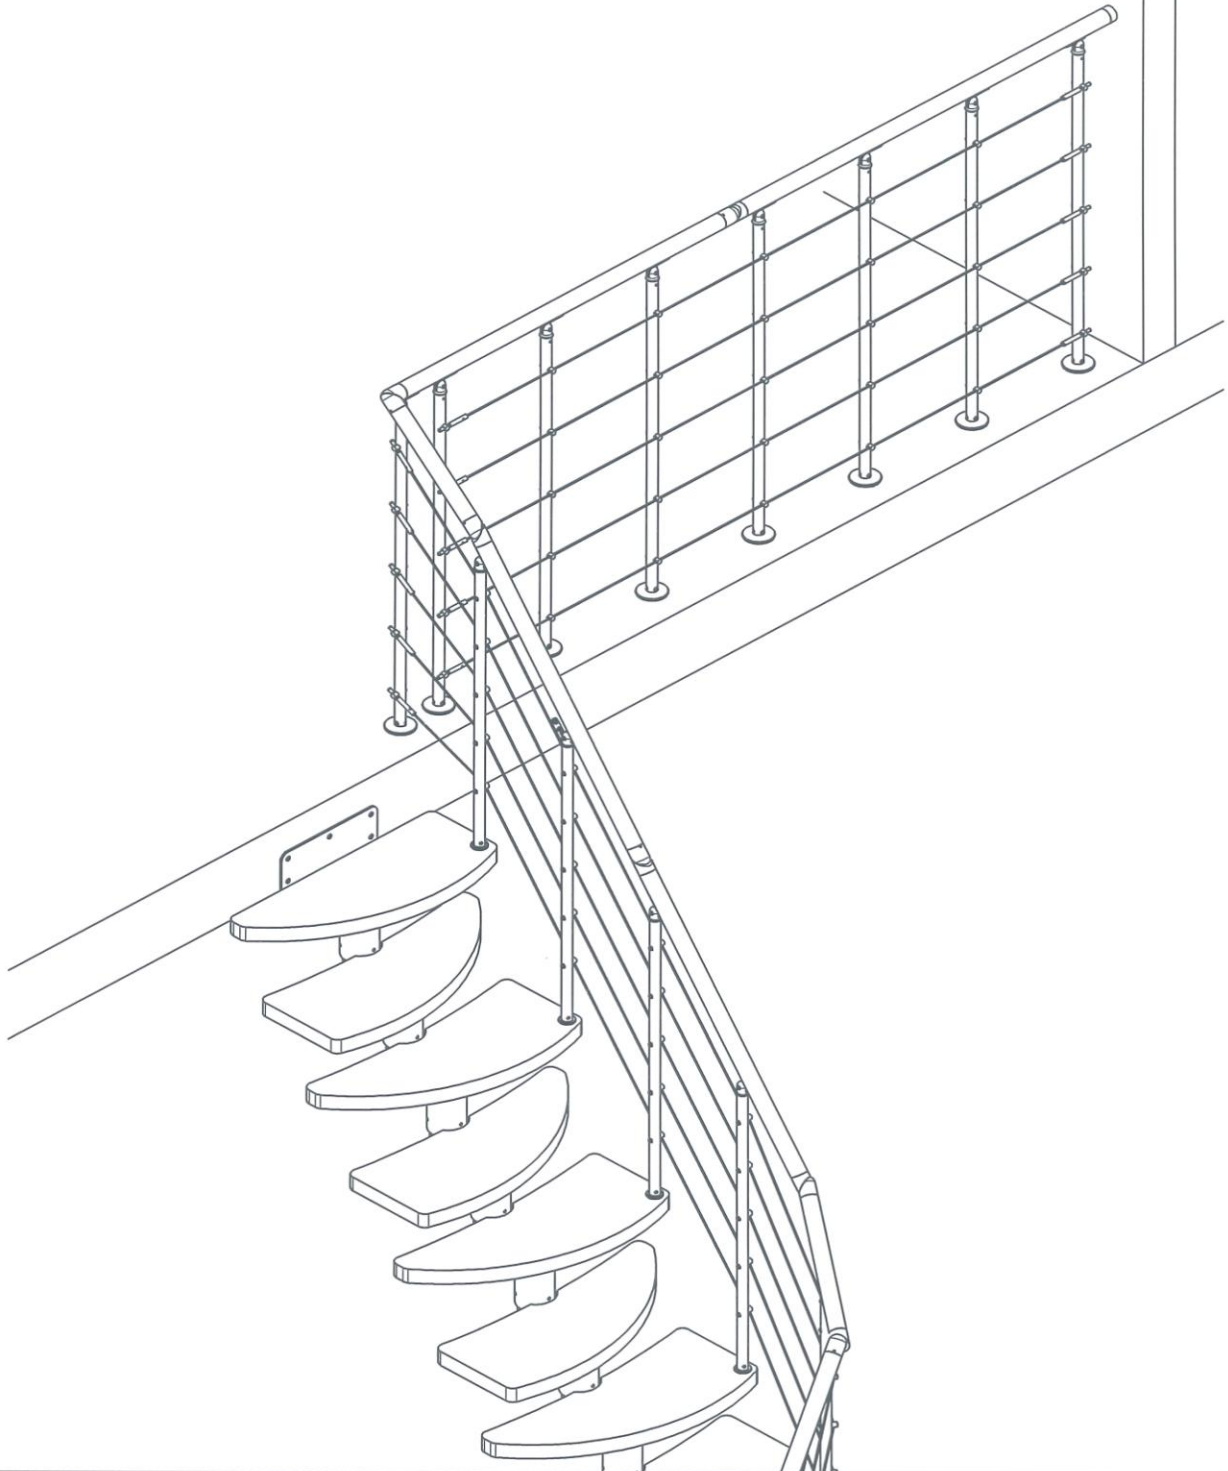



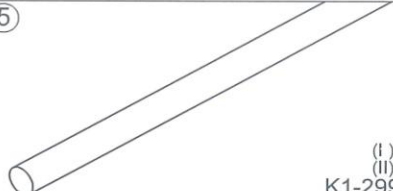



ROME

Mounting Instructions – Balcony Banister



(I) Starter Kit
(II) Standard Kit

<p>①</p>  <p>910</p> <p>(I): x4 (II): x3 K2-29281</p>	<p>③</p>  <p>(I): x4 (II): x3 K1-12207</p>	<p>④</p>  <p>(I): x4 (II): x3 K1-29204</p>	<p>⑤</p>  <p>(I): x1 (II): x1 K1-29920 Ø40x1000</p>		
<p>⑥</p>  <p>(I): x1 (II): x0 K2-01010</p>	<p>⑦</p>  <p>(I): x1 (II): x0 K1-01620</p>	<p>⑧</p>  <p>(I): x1 (II): x1 K2-01070</p>	<p>⑨</p>  <p>(I): x10 (II): x0 K2-04200</p>	<p>⑩</p>  <p>(I): x20 (II): x15 K1-04041</p>	
<p>⑪</p>  <p>(I): x1 (II): x1 K1-23290 Ø3x5000</p>					
<p>⑳</p>  <p>(I): x4 (II): x3 K3-01002 M5x18</p>	<p>㉑</p>  <p>(I): x4 (II): x3 K3-03020 M5</p>	<p>㉒</p>  <p>(I): x4 (II): x3 K3-05060 M6x8</p>	<p>㉓</p>  <p>(I): x13 (II): x9 K3-08002 Ø8x40</p>	<p>㉔</p>  <p>(I): x13 (II): x9 K3-06022 Ø5x35</p>	<p>㉕</p>  <p>(I): x5 (II): x2 K3-06064 Ø4x25</p>
<p>㉖</p>  <p>(I): x8 (II): x6 K3-06018 Ø4x25</p>	<p>㉗</p>  <p>(I): x20 (II): x15 K1-04040 M6x18</p>				

